





AM/FM 0.9 LED CLOCK
RADIO WITH AUX-IN
AMPLIFICATION AND 2
USB and 2 110V OUTPUT

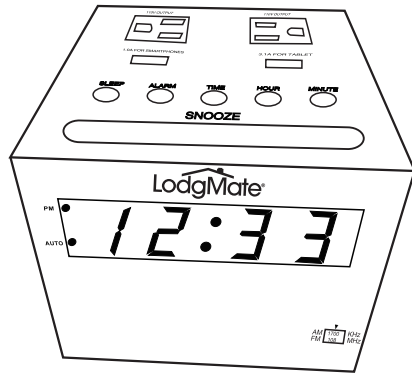

Model No.: CR-106
OWNER'S MANUAL

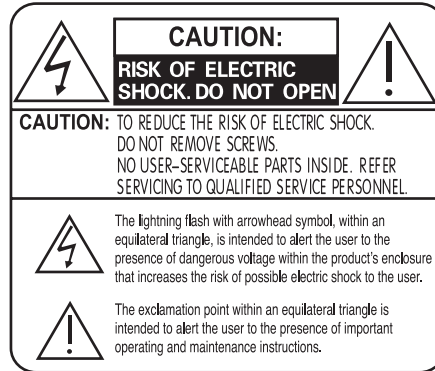


CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, "FULLY INSERT."

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**IMPORTANT SAFEGUARDS FOR AUDIO PRODUCTS.
PLEASE READ CAREFULLY ALL THE FOLLOWING
IMPORTANT SAFEGUARDS THAT ARE APPLICABLE
TO YOUR APPLIANCE.**

1. All the safety and operating instructions should be read before the appliance is operated.
2. The safety and operating instructions should be retained for future reference.
3. All warnings and cautions on the appliance and in the operating instructions should be adhered to.
4. All operating and use instructions should be followed.
5. The appliance should not be used near water, near a bathtub, kitchen sink, laundry tub, or near a swimming pool etc.
6. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa rug, or surface that may block the ventilation openings. Bookcases and cabinets may impede the air flow through the ventilation openings.
7. The appliance should be situated away from heat sources such as radiators, heat registers, stoves, other appliances that produce heat.
8. The appliance should be connected to the power supply only if the type described in the operating instructions matches.
9. Precautions should be taken so that grounding of the appliance does not occur.
10. Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
11. The appliance should be cleaned only as recommended by the manufacturer.
12. The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
13. Care should be taken so that objects do not fall, and liquids are not spilled into the enclosure through openings.
14. The appliance should be serviced by qualified service personnel when:
 - a. The power supply cord or the plug has been damaged.
 - b. Objects have fallen, or liquid has been spilled into the appliance.
 - c. The appliance has been exposed to rain.
 - d. The appliance doesn't appear to operate normally or exhibits a marked change in performance.
 - e. The appliance has been dropped, or the enclosure damaged.
15. Servicing- The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
17. Where the main plug is used as the disconnect device, the disconnect device shall remain readily operable.

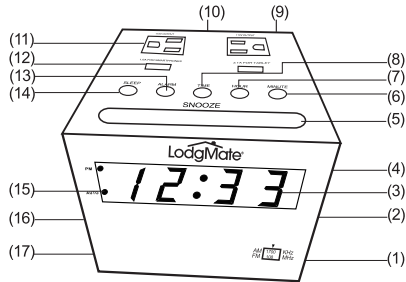

- | | |
|-------------------------------|--------------------------|
| 1. TUNING KNOB | 9. AUX CABLE |
| 2. AUX/AM/FM-CHARGER SELECTOR | 10. BATTERY COMPARTMENT |
| 3. RED LED DISPLAY | 11. 110V OUTPUT SOCKET |
| 4. VOLUME/BUZZER CONTROLLER | 12. USB CHARGING |
| 5. SNOOZE BUTTON | 13. ALARM SET/OFF BUTTON |
| 6. MINUTE SET BUTTON | 14. SLEEP BUTTON |
| 7. HOUR SET BUTTON | 15. ALARM ON INDICATOR |
| 8. TIME SET BUTTON | 16. SPEAKER |
| | 17. ON/OFF/AUTO BUTTON |

OPERATING INSTRUCTIONS

- ON/OFF/AUTO...slide the switch to turn radio "ON", "OFF" or "AUTO" position. When the switch is in the "ON" or "OFF" position, it means the radio will turn on or turn off; when in the "AUTO" position, it will sound the alarm automatically.
- TIME SET BUTTON...Press this button simultaneously with the HOUR or MINUTE button to set the desired time.
- ALARM SET BUTTON...Press this button simultaneously with the HOUR or MINUTE button to set the desired wakeup time.
- SLEEP SET BUTTON...Press this button display the number of minutes (59 or less). This button is used to play the radio for a set desired time. The radio will shut off automatically after the set time has expired.
- HOUR AND MINUTE BUTTON...Use the button to set the time.
- AUX/AM/FM-CHARGER SELECTOR...Slide the selector to select the AUX IN amplification or AM/FM desired radio station or USB charging.
- VOLUME/CONTROLLER.....When playing the radio, please adjust the volume to desired level on the side.
- TUNING KNOB...Turn this knob to the desired radio station.
- SNOOZE BUTTON...When you are awakened by music but wish to sleep a few minutes more simply touch the "snooze" button and it will shut off the music. This will last 9 minutes before the music sounds again. This can be repeated several times.

POWER SOURCE

Plug the AC line cord into the 120V/60Hz power outlet. The unit is now working, and the display figures will blink to indicate the correct time needs to be set.

TO SET THE CLOCK

Press the TIME SET BUTTON together with the HOUR BUTTON or MINUTE BUTTON to set the correct time.

TO SET THE ALARM TIME

Step 1: Press the Alarm set button to check the alarm time.
Step 2: Press the Alarm set button together with the HOUR or MINUTE button to adjust the alarm time.

NOTE: Slide the ON/OFF/AUTO switch to "AUTO" position, a glowing dot appears on the lower left corner or the display, indicating that the alarm has been set to operate.

TO PLAY THE RADIO

Step 1: Slide the ON/OFF/AUTO switch to "ON" position.
Step 2: Slide AUX/AM/FM switch to desired AM or FM station.
Step 3: Select the desired radio station by turning the Tuning knob.
Step 4: Adjust the Volume to the desired listening level.

TO WAKE TO RADIO

Step 1: Slide the ON/OFF/AUTO switch to "ON" position.
Step 2: Turn the radio on and select the desired radio station and volume setting as previously instructed.
Step 3: Slide the ON/OFF/AUTO switch to "AUTO" position. Your unit is now set to turn on automatically at the pre-selected alarm time.

TO WAKE TO BUZZER

Step 1: Set the alarm time as previously instructed.
Step 2: Slide the ON/OFF/AUTO switch to "AUTO" position.
You will be awakened at the pre-selected alarm time by the buzzer tone. To turn the buzzer off, slide the ON/OFF/AUTO switch to "OFF" position or press ALARM SET/OFF button.

AUX-IN AMPLIFICATION

Your clock radio has a special feature, you can amplify the sound from your digital device through your clock radio. Follow the steps below:

- Plug the AUX cable into the earphone jack of your portable device.
- Turn power of your portable device on.
- Slide AUX/AM/FM SELECTOR to "AUX" position and adjust volume. Enjoy your music!

USB CHARGING

Slide the AUX/AM/FM-CHARGER selector to the FM-CHARGER position, then you can charge your device.

SLEEP CONTROL

Step 1: Slide the AUTO/OFF/ON switch to "AUTO" position.
Step 2: Press the Sleep set button to display the sleep time. The display will indicate 59 minutes. If you wish the radio to play for a shorter period simply press the Sleep set button together with the MINUTE button to set the desired time period. Or if you wish to play longer, press sleep button along with HOUR button to play for 1 hour and 59 minutes.
Step 3: Press the sleep set button. The radio will turn on automatically and will turn itself off when the present time has passed.

NOTE: The maximum sleep time is 1 hour and 59 minutes. The radio will be switched off automatically when the sleep time expires. To turn the radio off before expiration of sleeping time, simply press the "SNOOZE BUTTON".

ALARM OFF

Slide the AUTO/OFF/ON switch to "OFF" position if you wish to turn off the radio/alarm. The radio/alarm will not sound again until the next day unless you switch back to alarm position or use alarm button to shut off alarm. The radio/alarm will sound again in 24 hours at the same alarm setting as long as the user moves from OFF to AUTO.

BATTERY BACK-UP

Your clock has a battery back up feature in case of power failure. A 9-volt battery (not included) is required. You must put in a battery to ensure the battery back up feature is ready in case of power failure. If power fails, the back up battery will automatically continue operation of the clock and maintain actual time. However, the display will not be lighted. When electrical power is restored, the display will light up again. The battery will maintain time for approximately 8 hours during power failure or interruption.

SPECIFICATIONS

Power Source	: AC 110V/60Hz
Output Power	: 500mW music
Power Consumption	: 1.5W
Frequency Range	: AM 530-1700 KHz FM 88 - 108 MHz
Clock Display	: 0.9" Red Display
AC Output	: 110V~5A
USB Output	: DC 5V = 1000mA DC 5V = 3100mA