


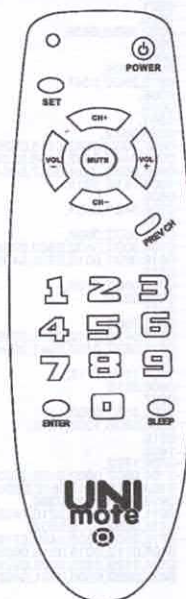

URC105 UNIVERSAL TELEVISION REMOTE



INSTRUCTION MANUAL

Please save for future reference

INTRODUCTION

Thank you for your purchase of the URC105 Universal Remote Control.

This remote allows you to replace a lost or broken TV remote.

This remote control operates common features of most models and brands of IR infrared controlled televisions.

In order to maintain compatibility with the greatest number of original remotes, certain functions present on your original remote may not be available with the URC105.

Please use this manual to become familiar with the operations of the URC105. It is recommended that you save this manual for future reference or for re-programming remote to work with a different device.

BATTERY INSTALLATION

Your URC105 universal remote requires two new AAA alkaline batteries to operate. To install batteries:


1. Remove screw from battery cover on back of remote. Push down on tab and lift cover off.
2. Match the batteries to the "+" and "-" marks inside the battery case and insert batteries.
3. Press battery cover back into place and replace screw.

Battery Saver-Your remote will automatically "time out" if keys are depressed for more than two minutes. This will save your batteries should your remote get stuck in a place where the keys remain depressed (e.g., between the sofa cushions, etc.)

Code Saver-You will have 90 seconds to change the batteries in the remote without losing the codes you have programmed. However, do not press any keys while changing batteries. If any button is pressed without batteries in the remote, all codes will be lost.

BUTTON FUNCTIONS

Some buttons on your remote control may have functions that are referred to by different names on the original device. For example, "PREV CH" may be called "Flashback" or "ENTER" may be called "Display". These differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your device. For example, your TV must be equipped with Previous Channel function for the "PREV CH" button to operate this feature.

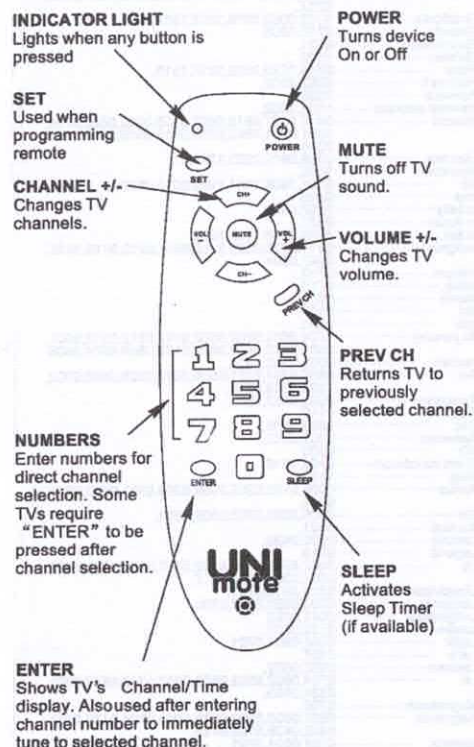

PROGRAMMING YOUR REMOTE

Using the Code Library

1. Manually turn on the TV.
2. Press and hold the "SET" button until the Indicator Light stays lit, then release "SET" button.
3. Find the four digit code for your brand of TV in the Code List (see back of these instructions). Enter the code using the Number keys. After your code is entered, the Indicator Light will turn off. Note: If the Indicator Light blinked twice and then stays lit after you entered the code, you may have entered an invalid code. Recheck the code list and try again.

4. With your TV turned on, press Channel Up button. If the TV responds, no further programming is required. Note: If some buttons do not function correctly with your equipment, try one of the other codes listed for your brand.

5. Enter your code here for future reference.

Using the Auto Search function

If the code for your TV is not listed, try the following to find the code for your device.

1. Manually turn on the TV.
2. Press and hold the "SET" button until the Indicator Light stays lit, then release "SET" button.
3. Press and release the "POWER" button until the device shuts off.
4. Press "ENTER" to complete setup and lock in your code.
5. With your TV on, press one of the buttons. If the TV responds, no further programming is required.

Using the Manual Search function

1. Manually turn on the TV.
2. Press and hold the "SET" button until the Indicator Light stays lit, then release "SET" button.
3. Press the "CH+" (or "CH-") button and release it.
4. Repeat to step 3 until the device shuts off
5. Press "ENTER" button to complete set up and lock in your code.

