


BERTCH BED BASE ASSEMBLY INSTRUCTIONS.

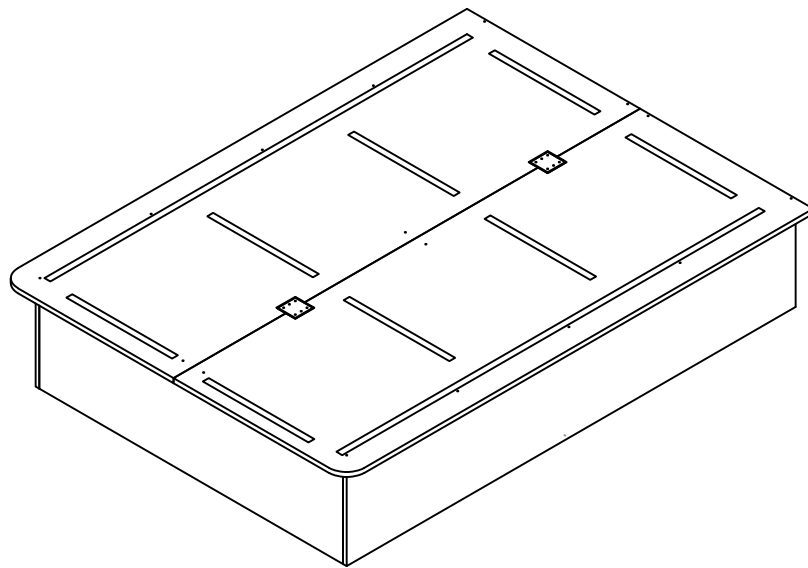


THESE INSTRUCTIONS ARE VALID FOR ALL
SIZES OF STANDARD BERTCH BED BASES.

STEP 1: LOCATE ALL COMPONENTS:


- 2 – SIDE PANELS
- 1 – END PANEL
- 2 – SUPPORT PANELS
- 2 – TOP PANELS
- 2 – FLAT BRACKETS
- 3 – TYPES OF SCREWS

IF YOUR BED BASE IS BLACK, THE END PANEL
AND SUPPORT PANELS ARE THE SAME.

STEP 2: LAYOUT SIDE, END & SUPPORT PANELS. THE BANDED EDGES GO ON THE FLOOR.

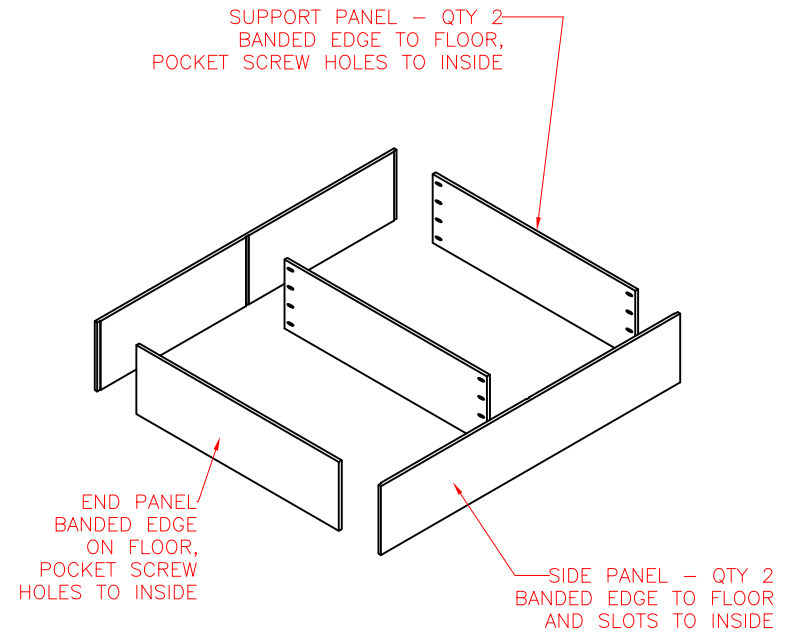


STEP 3: STARTING WITH THE CENTER SUPPORT PANEL ATTACH THE SIDE PANEL, MAKING SURE THE CENTER SUPPORT PANEL IS HELD TIGHTLY INTO THE SLOT. IT MAY BE NECESSARY TO TURN THE BASE AGAINST A WALL FOR LEVERAGE.

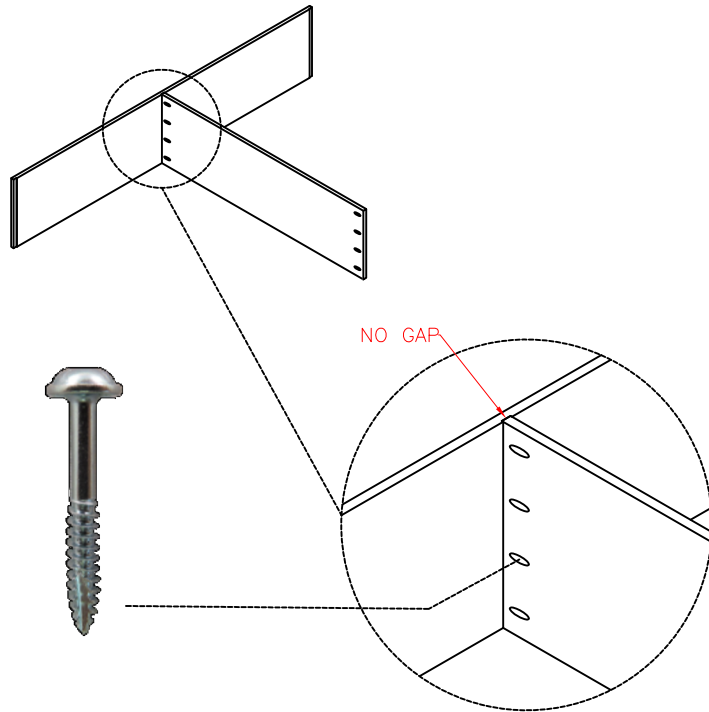

STEP 4: ATTACH CENTER SUPPORT PANEL TO SECOND SIDE PANEL.


STEP 5: REPEAT STEPS 3&4 WITH BACK SUPPORT PANEL AND END PANEL (FRONT).

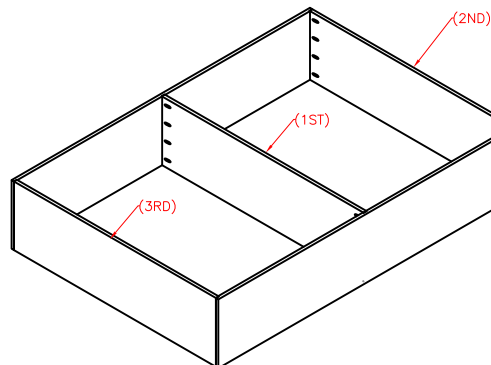


STEP 6: SET THE BED BASE FRAME INTO DESIRED POSITION IN THE ROOM. IF ANY LEVELING IS DESIRED, IT SHOULD BE DONE AT THIS POINT.

STEP 7: SET THE TOP PANELS IN PLACE, MAKING SURE OF THE FOLLOWING:
a.) THE NON SKIDS STRIPS AND BRACKET POCKETS ARE FACING UP.
b.) THE BACK EDGES ARE ALIGNED WITH THE BACK SUPPORT PANEL
c.) THERE IS A 3" OVERHANG ON EACH SIDE

SECURE THE TOP PANELS TO THE BASE FRAME USING ALL OF THE PREDRILLED HOLES. THE SCREWS MUST HIT THE FRAME. IF THE COMPONENTS ARE NOT ALIGNED PRECISELY, THE TOP SCREWS WILL MISS THE FRAME MEMBERS AND YOUR BED BASE WILL BE UNSAFE.

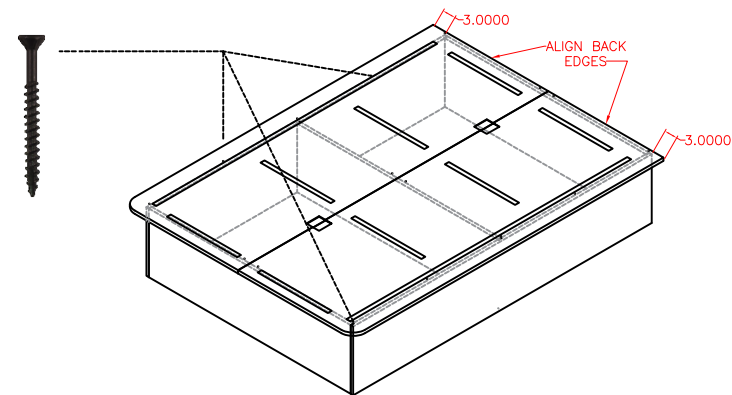

STEP 8: INSTALL THE 3X3 FLAT BRACKETS INTO THE BRACKET POCKETS ON THE TOP PANELS.

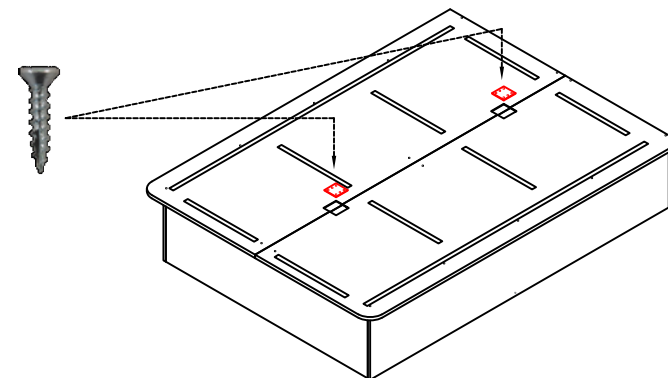

THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF BERTCH CABINET MANUFACTURING AND SHALL NOT BE REPRODUCED, COPIED, OR USED AS THE BASIS FOR MANUFACTURING OR SALE OF APPARATUS OR DEVICES WITHOUT WRITTEN PERMISSION.

PROJECT:

FINISHES:

LOCATION:

DATE:
01/23/2019

DRAWN BY:
TSM

SCALE:
NA

REVISED:
06/22/2022